


## MULTIFUNCTION LIQUID CRYSTAL DISPLAY

When the ignition key (1) is set to “”, all segments of the multifunction display come on (this is a test of all components). The display resumes the last function set after the vehicle was stopped.

## CAUTION

After the first 1000 kilometres and every 6000 kilometres afterwards, a **SERVICE** warning is displayed.

When you see this message, contact an Aprilia Official Dealer to have the vehicle serviced as specified in the periodic maintenance chart, see page 41 (**PERIODIC MAINTENANCE CHART**).

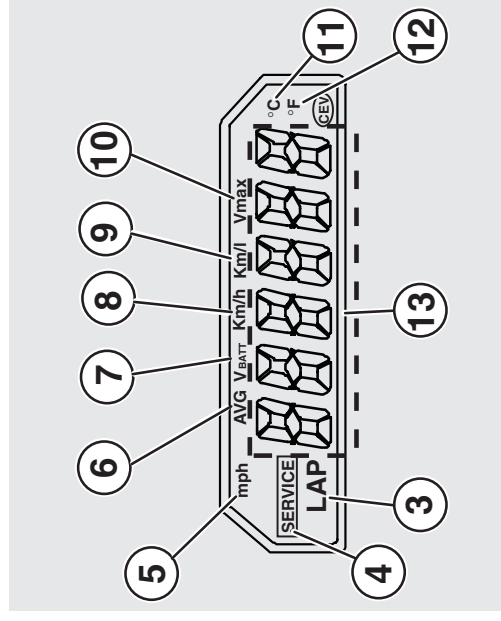

The different functions are selected and displayed by pressing the **MODE** button (2) placed on left side of the handlebar.

The segments of the multifunction display are:

Lap timer indicator (3), service term icon (4), average mph speed icon (5), average speed (6), battery charge icon (7), average kph speed icon (8) (the same icon is used for “consumption” indication expressed in Km/l), consumption expressed in mi/Gal. (used on versions ( ) only) (9), maximum speed icon (10), icon of the external temperature expressed in Celsius degrees (° C) (11), icon of the external temperature expressed in Fahrenheit degrees (° F) (12), six-digit reading of the set functions identified by the corresponding icons (13).

Press the **MODE** button repeatedly to select in the order:

